


RIPCORD
(SEE IWSDET-112)

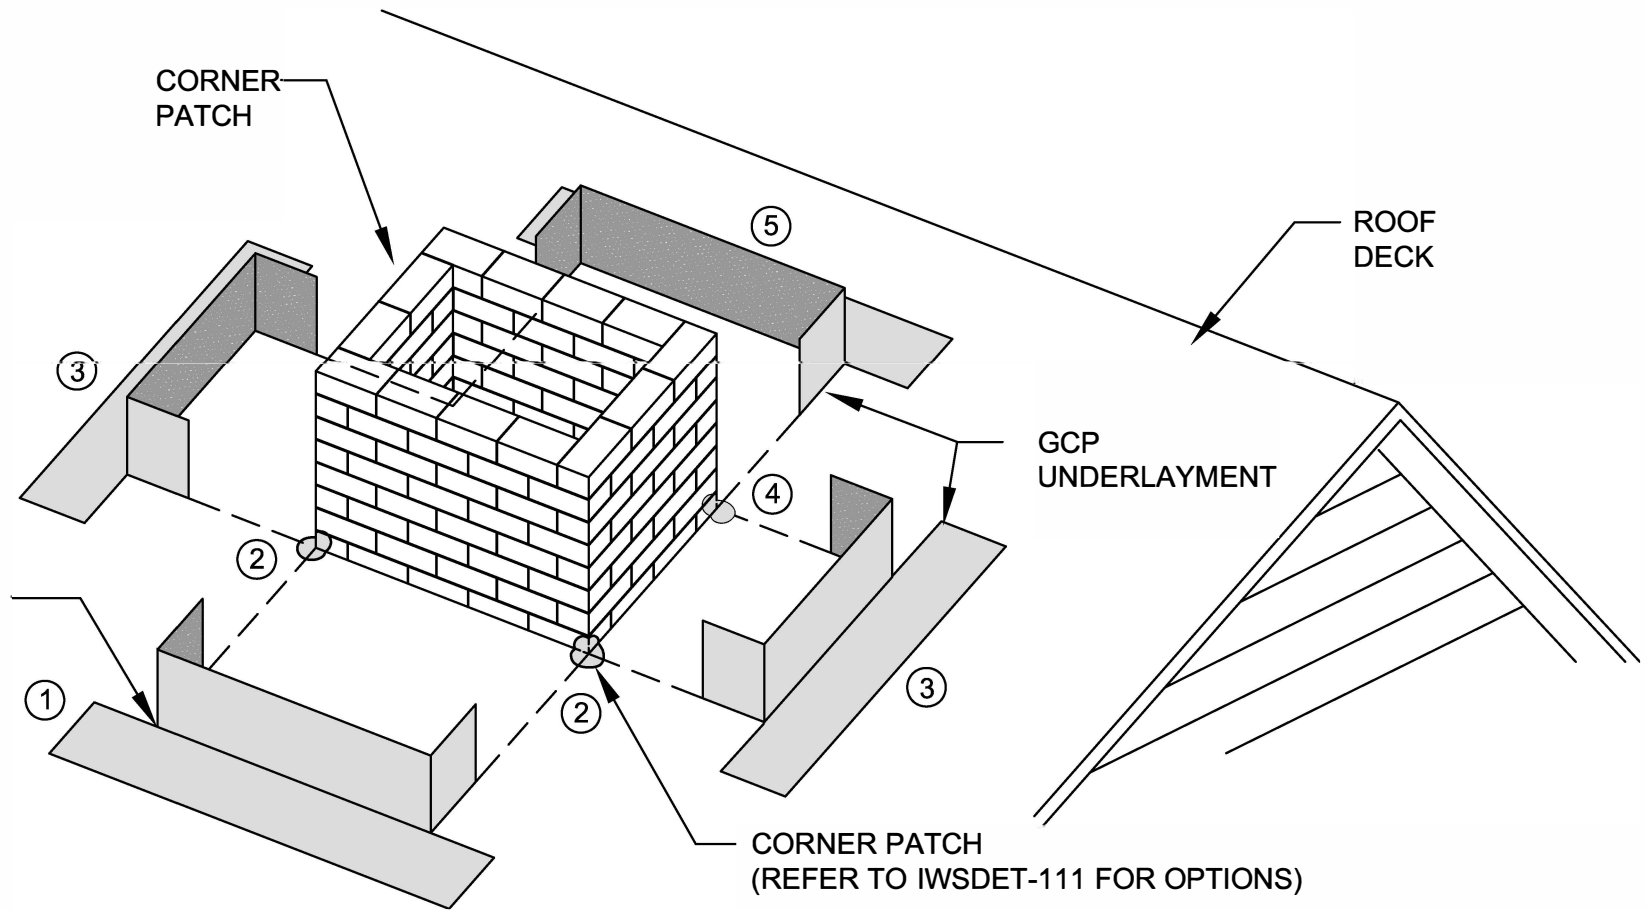

NOTES:

- A. VISIT GCPAT.COM FOR THE MOST CURRENT DETAILS AND INSTALLATION VIDEO
- B. REFER TO PRODUCT DATA SHEETS ON WEB SITE FOR FURTHER INFORMATION
- C. PRIME MASONRY CHIMNEY WITH PERM-A-BARRIER® WB PRIMER AS NECESSARY
- D. RIPCORD® HAS BEEN REMOVED ALONG ROOF AND CHIMNEY FOR EASE OF INSTALLATION
- E. INSTALL GCP UNDERLAYMENT IN ORDER AS SHOWN BY NUMBERS
- F. APPLY A BEAD OF COMPATIBLE SEALANT ALONG THE TOP TERMINATION EDGE OF GCP UNDERLAYMENT ON CHIMNEY
- G. EXTEND GCP UNDERLAYMENT FROM EAVE TO BELOW CHIMNEY AND FROM ABOVE CHIMNEY TO RIDGE
- H. INSTALL GCP UNDERLAYMENT TO FORM WATER-SHEDDING LAPS
- I. REFER TO NRCA OR SMACNA FOR METAL COUNTERFLASHING AND ROOFING OPTIONS AT CHIMNEY
- J. FOR WOODEN CHIMNEY, REFER TO DETAILS IWSDET-105 AND IWSDET-106



CHIMNEY

GRACE ICE & WATER SHIELD®

Drawings: IWSDET-108

Scale: Not to scale

Effective Date: 01/22/18

Supersedes: 05/16/06