


GRACE VYCORNER™ OR
CORNER PATCH RECOMMENDED
(SEE VCRDET-507 OR VCRDET-504 FOR OPTIONS)

MECHANICALLY FASTEN AS
NECESSARY IN CORNERS
THROUGH GRACE VYCOR PLUS


GRACE S100 SEALANT OR
COMPATIBLE SEALANT
TERMINATION

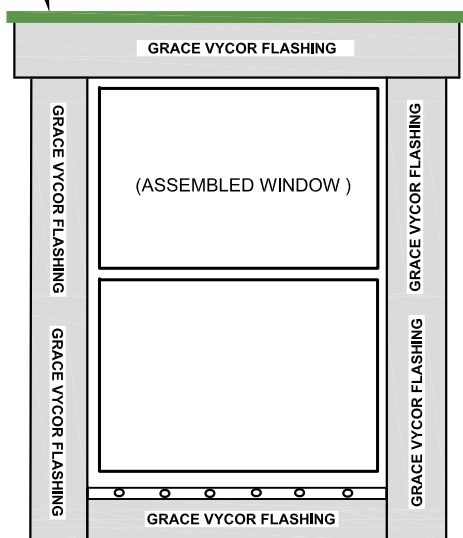

DO NOT FLASH
OVER BOTTOM NAILING FLANGE

NOTES:

- A. VISIT GRACECONSTRUCTION.COM FOR THE MOST CURRENT DETAILS, INSTALLATION VIDEO AND PRODUCT DATA SHEETS
- B. RIPCORD® CAN BE REMOVED FROM GRACE VYCOR FLASHING FOR EASE OF INSTALLATION
- C. INSTALL GRACE VYCOR FLASHING IN ORDER AS SHOWN BY NUMBERS
- D. DETAIL RELEVANT FOR ALL GRACE VYCOR FLASHINGS
- E. INSTALL GRACE VYCOR enV-S VERTICALLY OR HORIZONTALLY TO FORM WATER SHEDDING LAPS
- F. INSTALL GRACE S100 OR COMPATIBLE SEALANT TO TOP LEADING EDGE OF HEAD FLASHING AND ALL NON WATER SHEDDING EDGES

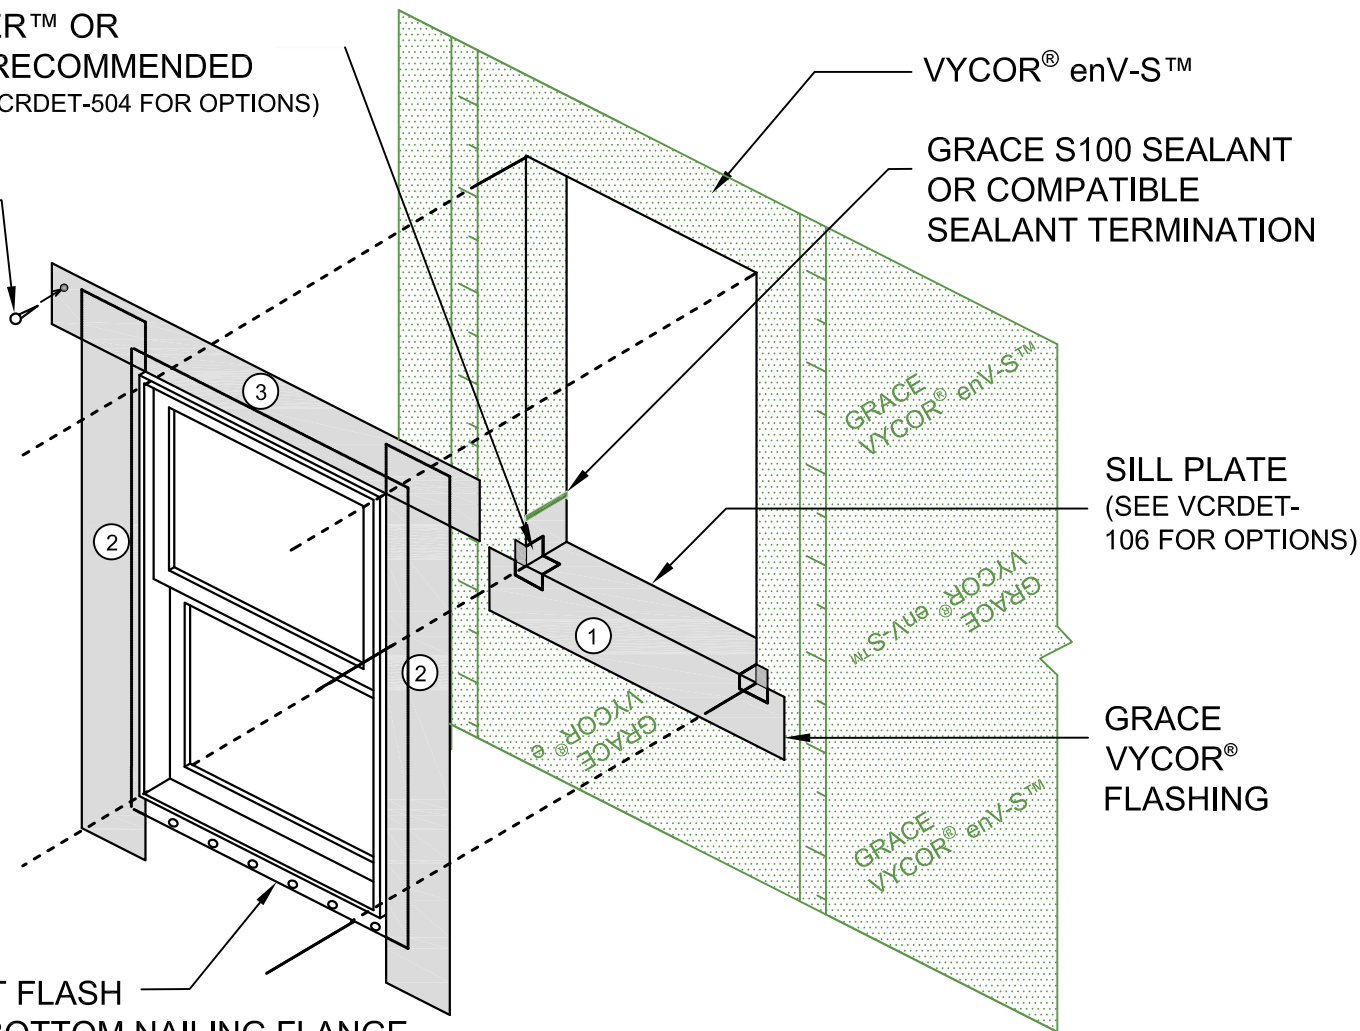

GRACE
Construction Products
www.graceconstruction.com
toll free 866-333-3726

FLANGED WINDOW
FLASHING INSTALLATION AFTER VYCOR® enV-S™
GRACE VYCOR® SELF-ADHERED FLASHING

Drawing: VCRENVS-100

Scale: Not to scale

Effective Date: 05/01/14

Supersedes: NEW