




**STEP 1 & 2**

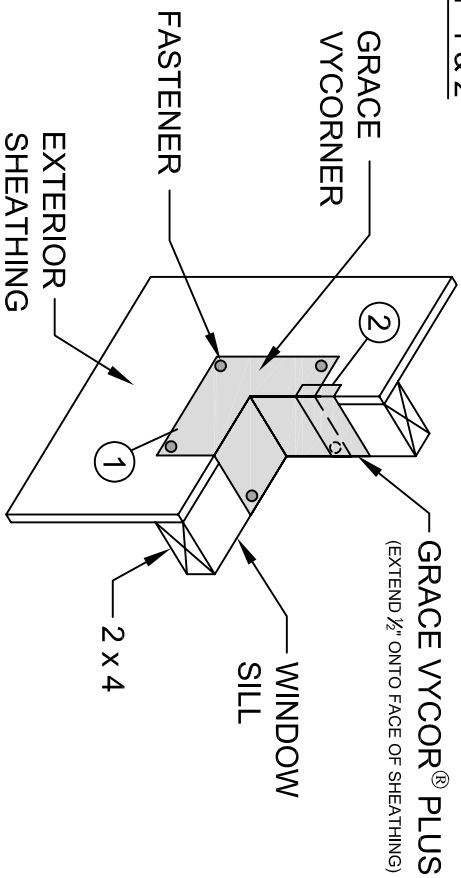


**STEP 3**

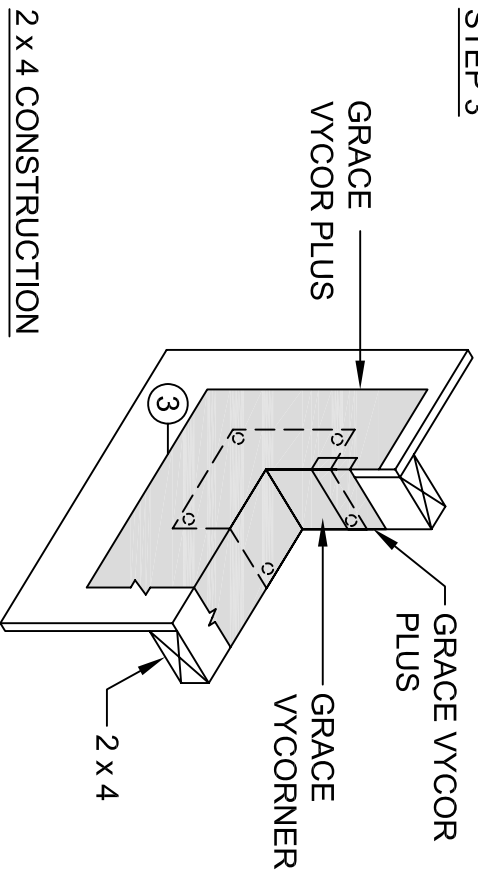

**STEP 1 & 2**

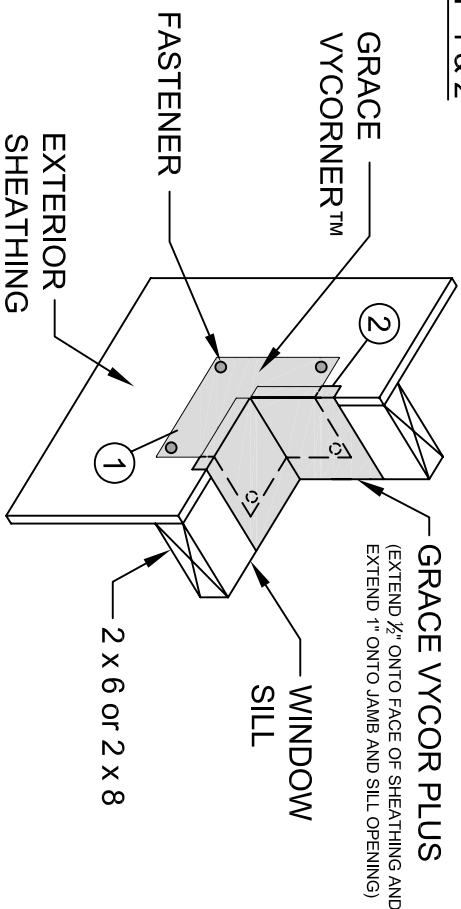

**STEP 3**

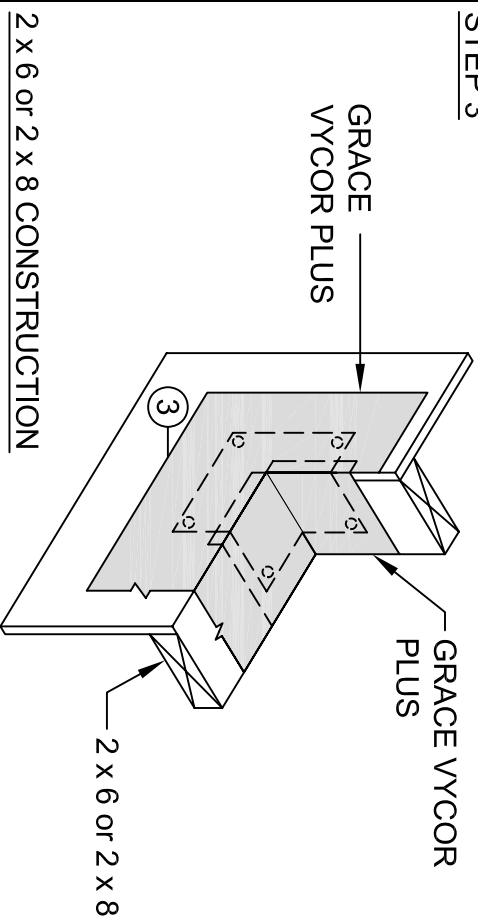

**NOTES:**

- A. VISIT GRACECONSTRUCTION.COM FOR THE MOST CURRENT DETAILS, INSTALLATION VIDEO AND PRODUCT INFORMATION SHEETS
- B. INSTALL IN ORDER AS SHOWN BY NUMBERS
- C. MECHANICALLY FASTEN THE GRACE VYCORNER IN CORNERS AS NECESSARY WITH NAILS OR STAPLES
- D. CHECK LOCAL BUILDING CODES FOR WEATHER RESISTIVE BARRIER REQUIREMENTS AND INSTALL GRACE VYCOR PLUS WITH VYCOR env TO FORM WATER-SHEDDING LAPS
- E. INSTALL GRACE VYCOR FLASHING AT WINDOW (SEE VCRDET-100 TO 111)
- F. INSTALL GRACE VYCORNER AT BOTH CORNERS OF WINDOW SILL
- G. DETAIL ALSO RELEVANT FOR ALL GRACE VYCOR FLASHINGS