

PREPRUFE® 300


(18-24 IN, 450- 600 mm STRIP)

PREPRUFE  
DETAIL TAPE

HYDRODUCT® DRAINAGE  
COMPOSITE (SEE NOTE E)

PREPRUFE  
DETAIL TAPE

SOIL RETENTION  
SYSTEM

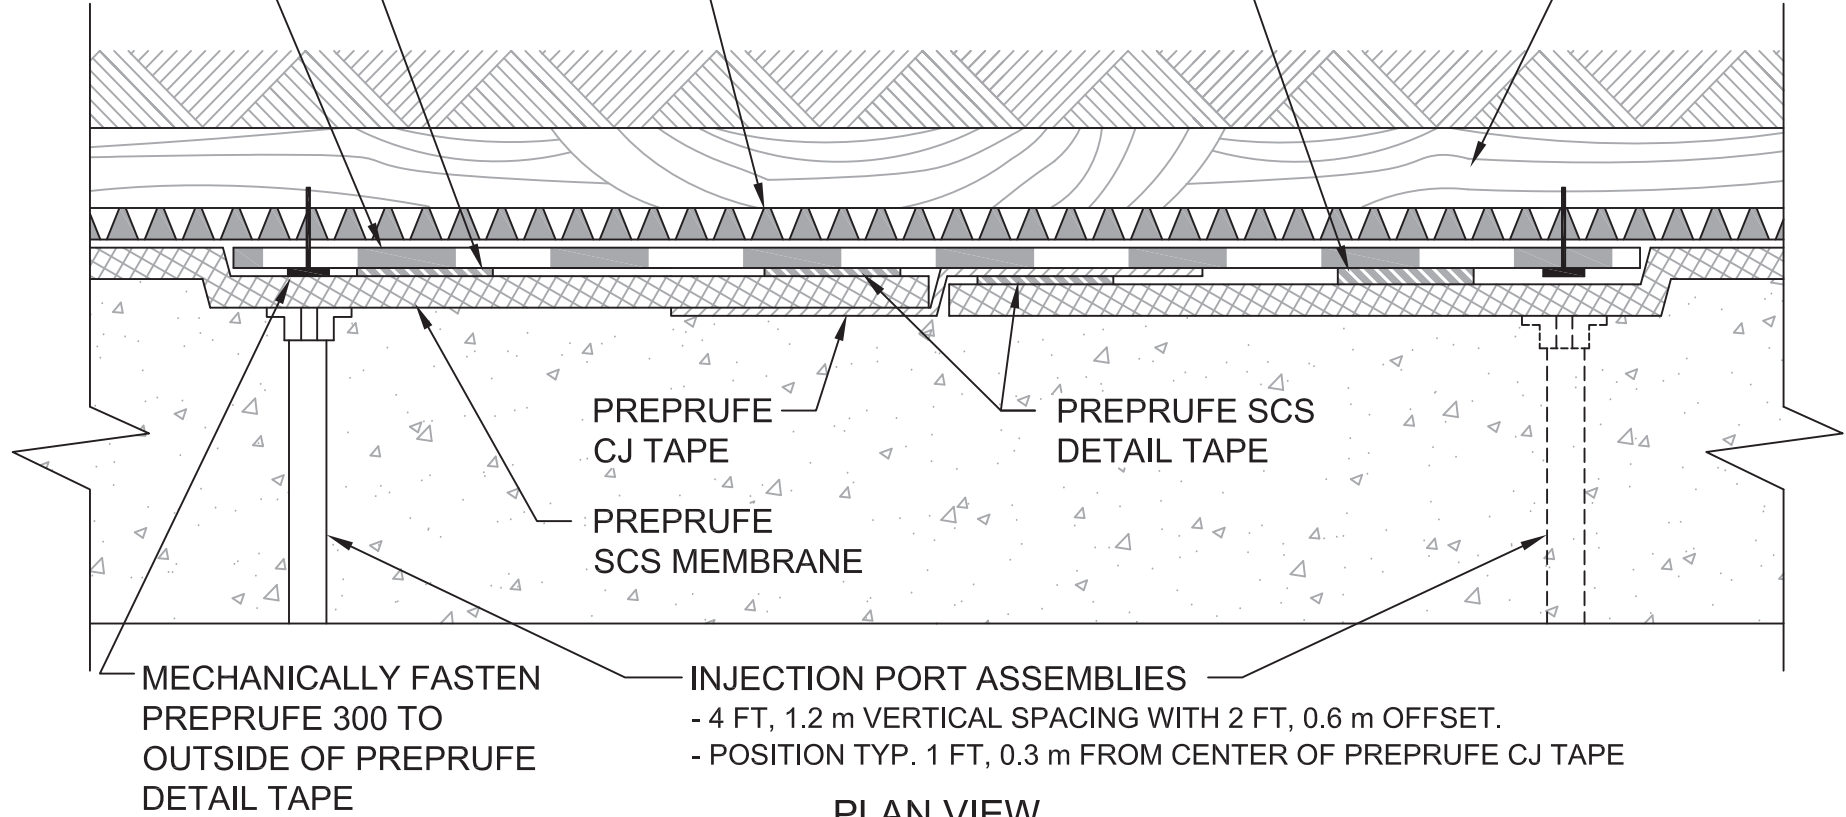

### PLAN VIEW

- NOTES:
- A) USE ONE (1) COMPARTMENTALIZATION DETAIL TYPICALLY WITHIN 10 FT, 3 m OF CORNERS (REFER TO SCS 015 & SCS 016)
  - B) ALSO APPLICABLE FOR LONG WALLS (E.G. > 200 FT, 60 m.) FOR OPTIMUM GROUT INJECTION CONTROL
  - C) TRIM EXCESS FABRIC PRIOR TO APPLYING PREPRUFE CJ TAPE
  - D) MECHANICAL FASTENERS MUST BE LOCATED OUTSIDE OF THE PREPRUFE DETAIL TAPE
  - E) IF HYDRODUCT IS USED AS PART OF THE DRAINAGE SYSTEM, 6 MIL, 1.5 mm POLY IS REQUIRED BETWEEN THE HYDRODUCT AND THE PREPRUFE SCS MEMBRANE
  - F) PREPRUFE DETAIL TAPE TO BE INSTALLED OVER PREPRUFE 300R 6-12 IN, 150- 300 mm. O.C.



# COMPARTMENTALIZATION (PLAN VIEW)

## PREPRUFE® SCS

### WATERPROOFING SYSTEM FOR SHOTCRETE

DRAWING: SCS 017

SCALE: Not to scale

EFFECTIVE DATE: 08/01/2016

SUPERCEDES: 03172014